




EVERGREEN

ARTIFICIAL GRASS

INSTALLATION INSTRUCTIONS

STONEHENGEUS.COM

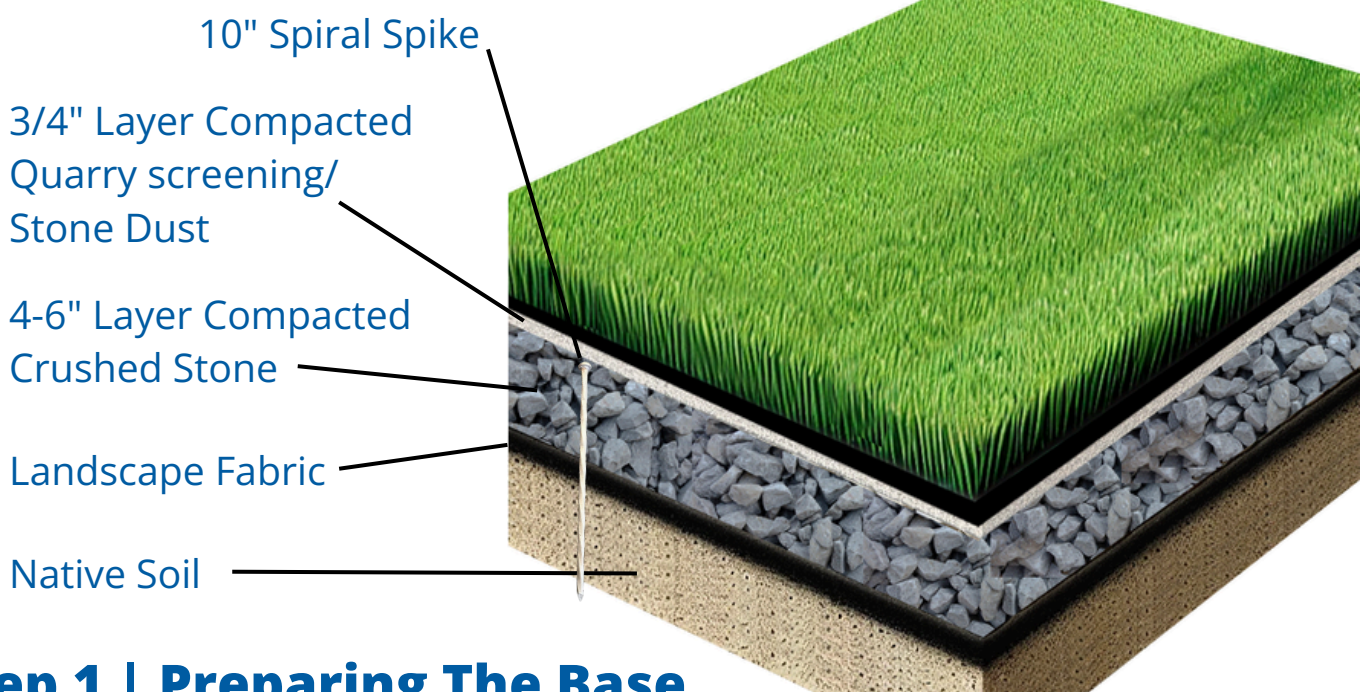

Step 1 | Preparing The Base

To ensure a smooth and even surface for your artificial grass, proper base preparation is essential. Follow these steps:


- **Clear the Area:** Remove existing soil, weeds, and roots as needed. The final surface quality will depend on how well the base is prepared.
- **Install Landscape Fabric:** Lay down landscape fabric to prevent weed growth, ensuring each section overlaps by at least 12/18 inches.
- **Create a Solid base:** Add a 4-6 inch layer of compacted crushed stone, followed by a ¾-inch layer of quarry screenings or stone dust.
- **Pre-Installation Tip:** Before laying the artificial grass, expose it to sunlight for a few hours to allow for natural expansion.




Before installing: It is advisable to leave the StonehengeUS Evergreen Artificial Grass in sunlight and heat for a few hours to allow for expansion.

Step 2 | Installing Evergreen Artificial Grass

- **Roll Out the Turf:** Roll out and position the artificial grass keeping the material taut.
- **Align Additional Rolls:** Unroll the next piece in the same direction, ensuring the blade pattern aligns. Lightly brush the edges to blend the fibers.
- **Seam Positioning:** Maintain a gap of approximately 1/8" to 1/4" between connecting sections of turf.
- **Seam Tape Application:** Lay seam tape along the seam's center, making sure it remains flat. A Knee Kicker tool can help.
- **Adhesive Application:** Apply a high-strength hardscape adhesive keeping the adhesive 1" from the center using an adhesive gun, apply adhesive in a serpentine pattern about 1 inch away from the center of the seam tape (see example image right). Avoid adding excess adhesive.
- **Closing the Seam:** Draw the edges together little by little, ensuring they stay aligned as you bring them together.
- **Securing the Seam:** Apply firm pressure along the seam to ensure strong adhesion.
- **Allow for Curing:** Let the adhesive set for hours before proceeding with additional steps.

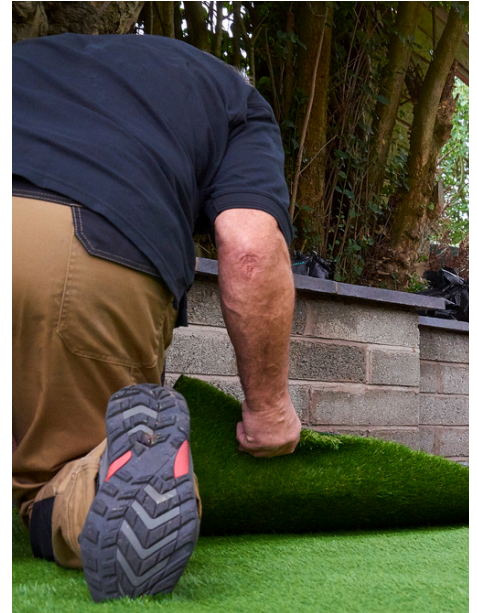

1" FROM CENTER

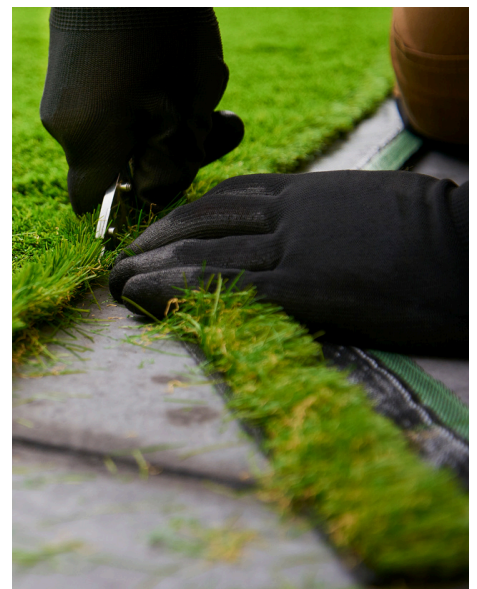


Step 3 | Final Securing & Trimming

- **Nailing the Edges:** Secure the perimeter by nailing every 6 inches using 10-inch spiral spikes, ensuring they sit flush without bending the fibers.
- **Proper Nail Placement:** Position spikes about 1/2" from the edge to prevent curling or lifting.
- **Trimming for a Perfect Fit:** Trim excess material around any structure with a sharp utility knife. Leave a small gap to accommodate natural movement and prevent overly tight cuts.
- **Cutting Around Objects:** When trimming around trees, fences, or other obstacles, use notches to allow the grass to lay naturally.



? NEED HELP?
VISIT [STONEHEDGEUS.COM](https://stonehedgeus.com)
AND USE OUR LIVE CHAT
FEATURE!

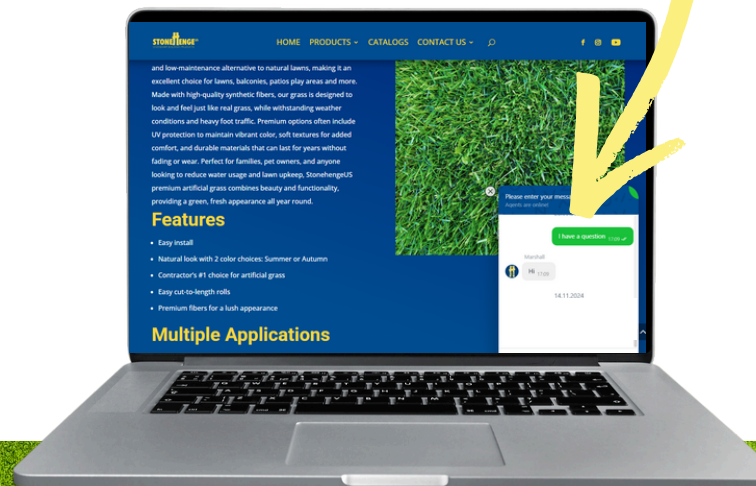

Completing Your Evergreen Artificial Grass Project

1. Avoid installing the grass during rain events or in areas where there is standing water.
2. Allow 24 hours for the seam glue to bond and cure before brooming or cleaning the grass.
3. Once cured, fluff the turf by using a power broom or rake to complete your installation.

